

Technical Specifications

Materials	Steel.
Connections	½ flow and return.
Test pressure	10 Bar
Testing authority	EN442
Maximum operating pressure	8 Bar
Maximum working temperature	80°C
Packaging	Polystyrene protection within cardboard box.

Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation. The Radiator Company cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.

THE **Radiator** COMPANY



TRC 13mm & 25mm horizontal
TRC 35mm horizontal
BD 13 & BD 25

Fittings Instructions

Includes new Aladdin Autovent fittings instructions

Automatic Radiator Bleed Valve

Matching
blanking plug
included if
required
for your
radiator

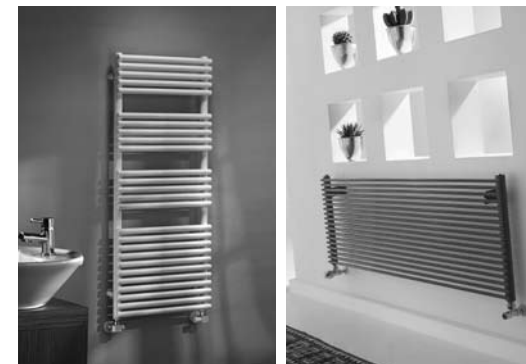

Horizontal tubular radiators create the perfect feature for any urban interior.

Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty.

The Radiator Company Ltd
Units 13 - 14 Charlwoods Road
East Grinstead
West Sussex
RH19 2HU



If you have any questions please contact us on 01342 302250
www.theradiatorcompany.co.uk


If you have any questions please contact us on 01342 302250
www.theradiatorcompany.co.uk

Diagrams of Tubular Horizontal


13mm TRC 13, BD 13 double




25mm TRC 25, BD 25 double

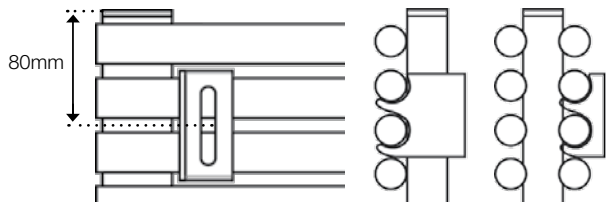


35mm TRC 35

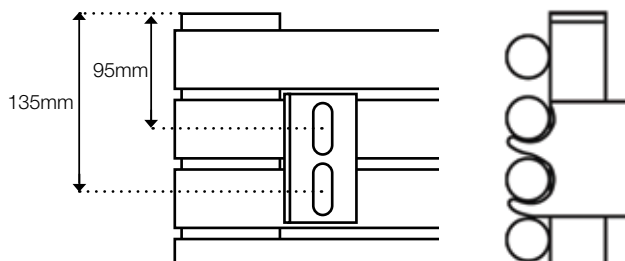

BD 13 single

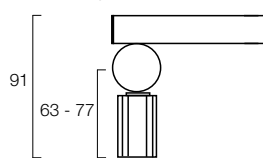

BD 25 single

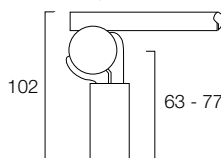

Pipe Centres


Pipe centres left to right = TRC 13, TRC 25 = width of radiator - 40mm
 TRC 35 = width of radiator - 35mm
 BD 13, BD 25 = width of radiator - 40mm

Pipe centres from wall = TRC 13, TRC 25, TRC 35,
 BD 13 / BD 25 single = 63mm - 77mm
 BD 13 / BD 25 double = 54mm

Depth from wall = TRC 13 = 80mm, TRC 25 = 94mm
 TRC 35 = 104mm,
 BD 13 single = 91mm, BD 13 double = 84mm
 BD 25 single = 102mm, BD 25 double = 94mm

1 Unpack & Inspect

The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures. We only select models with excellent standards of welding and brazing, as well as high quality finishes. All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

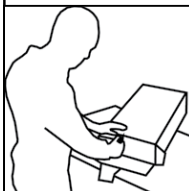

Please carefully unpack and inspect this radiator and all fittings. The Radiator Company must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on back page.

2 Contents

You should have:

- 1 Radiator
- 4 Wall brackets
- 1 Aladdin Autovent HV30 Valve
- 1 Aladdin Blanking Plug, if your radiator requires a plug
- 1 Hex screw
- 1 Allen key
- 2 Decorative O ring

You will need:

- Tape measure
- Electric drill and bits
- Spirit level

3 Mark Bracket Positions

TRC 13, BD 13 double

The fixing positions for the two top brackets are measured down 50mm and spaced left to right as required along the cross tubes within the collectors (please see diagram opposite).

TRC 25, BD 25 double

The fixing positions for the two top brackets are measured down 80mm and spaced left to right as required along the cross tubes within the collectors (please see diagram opposite).

BD 13 single, BD 25 single

The fixing positions for the two top brackets are measured down 80mm and spaced left to right as required along the cross tubes within the collectors (please see diagram opposite).


TRC 35

The two fixing positions for the two top brackets are measured down 95mm and 135mm and spaced left to right as required along the cross tubes within the collectors (please see diagram opposite).

In order to accurately mark the bottom bracket fixing positions we recommend you mark, fix and level the two top brackets first. Then hang the radiator, ensuring it is level and manually hold the bottom brackets in position while marking.

4 Fix Brackets

Using a suitable drill bit, screws and plugs, fix the brackets and level with a spirit level (please see diagrams).

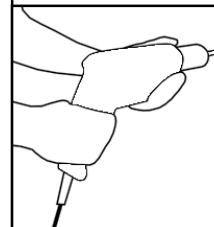

PLEASE NOTE :

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

5 Identifying and removing diverter

The factory fitted diverter can be identified by a 'diaframma' sticker found on the underside of one collector. This diverter must be removed prior to installing the radiator by inserting a long handled screw driver or similar implement and breaking out the perforated disc. To prevent damage to the heating system this disc must be completely removed from the radiator.

6 Hang Radiator & Commission

With the brackets firmly fixed and level, the radiator is lowered directly onto the brackets.

7 Installation of Autovent

- The valve will operate faster if fitted to the hotter, flow side of the radiator.
- To fit the round airvent, first insert the airvent until hand tight, then using the hex key supplied place in the hole on the side of the vent to tighten a further ¼ turn, **but do not over-tighten** as this may damage the paint finish and rubber o-ring.
- Place the decorative O ring over the vent and tighten the small grub screw with the hex key supplied; Please note the small grub screw is not designed to fit into the hole on the side of the airvent, the grub screw should grip the side of the vent to enable the ring to fit flush.
- Although the o-ring provides sufficient seal and no tape or sealant is required, a small amount of PTFE tape must be used if preferred.
- When priming the radiator, air will bleed automatically until water reaches the valve when it will shut automatically.

After the first fill

- Dependant upon system temperature and pressure, it may take up to 48 hours for the valve to operate after the first fill.
- To drain down the radiator, once there is no internal pressure in the system, use a spanner to loosen the valve half a turn or so to allow air to enter the system.
- To refill after draining, either wait up to 6 hours for the valve to reset to automatic operation, or vent manually using a spanner.
- The valves have a guaranteed 3 year life after which, if the radiator collects air, replacements can be purchased from The Radiator Company.